


WINCHESTER MAGNUM ACTION ONLY

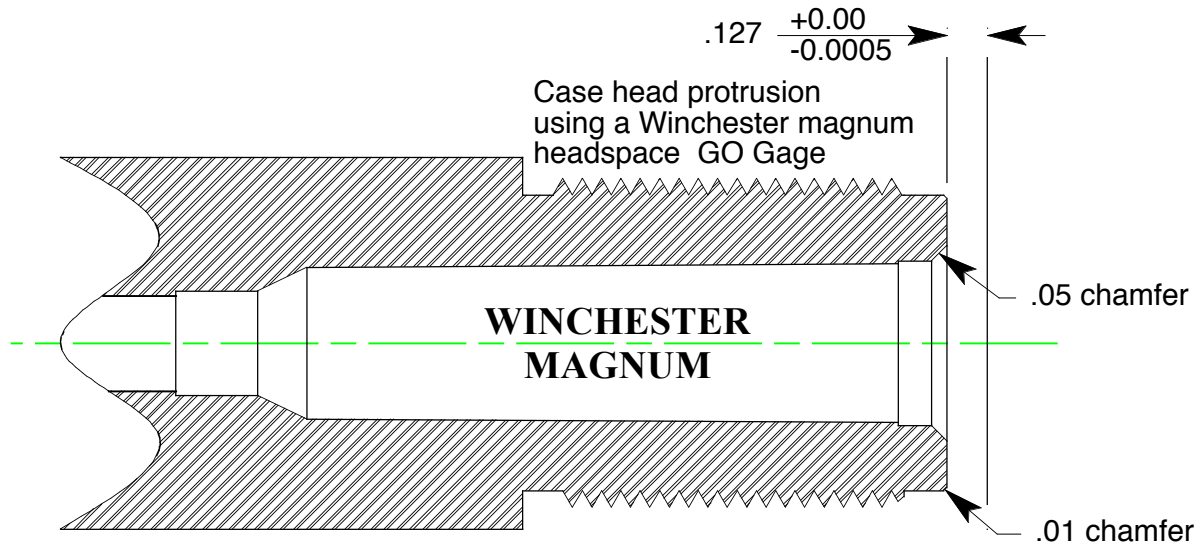

Warning:
When installing a barrel the Headspace must be verified by use of a gage. Failure to do this may result in damage to the firearm and injury to the shooter.

Unless otherwise specified
Dimensions are in Inches
TOLERANCES:
ANGLES $\pm .5^\circ$
FRACTIONS $\pm .015$
.00 $\pm .01$
.000 $\pm .005$
.0000 $\pm .0005$


BADGER ORDNANCE

1141 SWIFT ST. N. KANSAS CITY, MO 64116
816 421-4956 FAX 816 421-4958

Barrel threads for M2008 & M2013 Win Magnum Action

A	Dwg No. 100-40-02A	Part No. 100-40	
---	-----------------------	--------------------	--

ENGINEER: M. BORDSON Scale 2:1 Date: 1 June 2013 Page 1 of 1

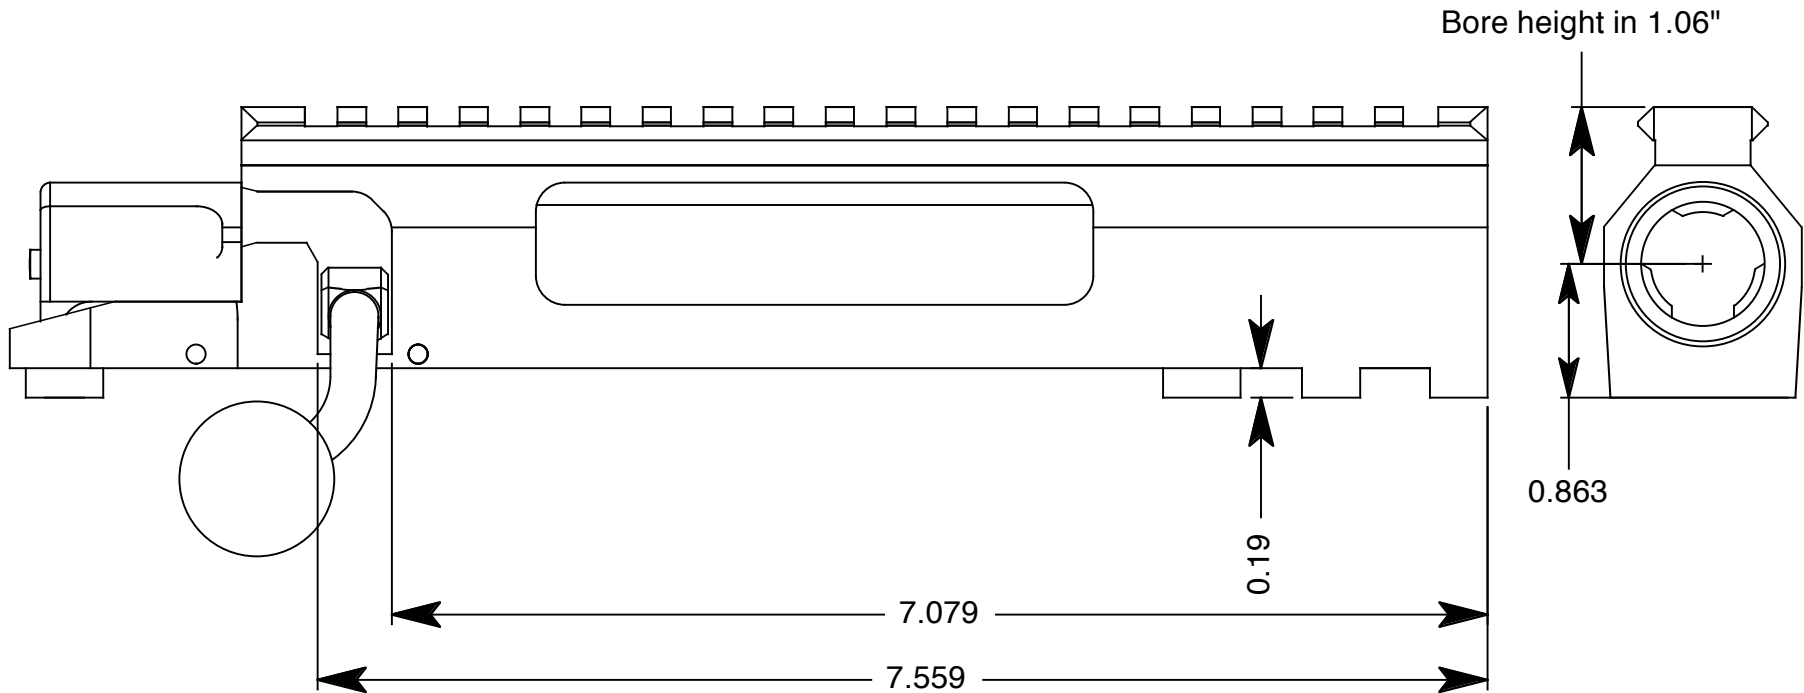

This product is warranted against defect of material or manufacture. No liability is expressed or implied for damage or injury which may result from improper installation or use of this product

Unless otherwise specified
 Diminions are in Inches
 TOLERANCES:
 ANGLES $\pm .5^\circ$
 FRACTIONS $\pm .015$
 .00 $\pm .01$
 .000 $\pm .005$
 .0000 $\pm .0005$

BADGER ORDNANCE INC.

1209 SWIFT ST.
 816 421-4956

N. KANSAS CITY, MO 64116
 FAX 816 421-4958

Action Inlet M2008 & M2013 Long Action




A	Dwg No.	100-40-01	Part No.	100-40		
				100-50		

ENGINEER: M. BORDSON


Scale: NONE

Date: 1 June 2013

Page 1 of 3

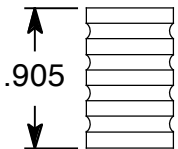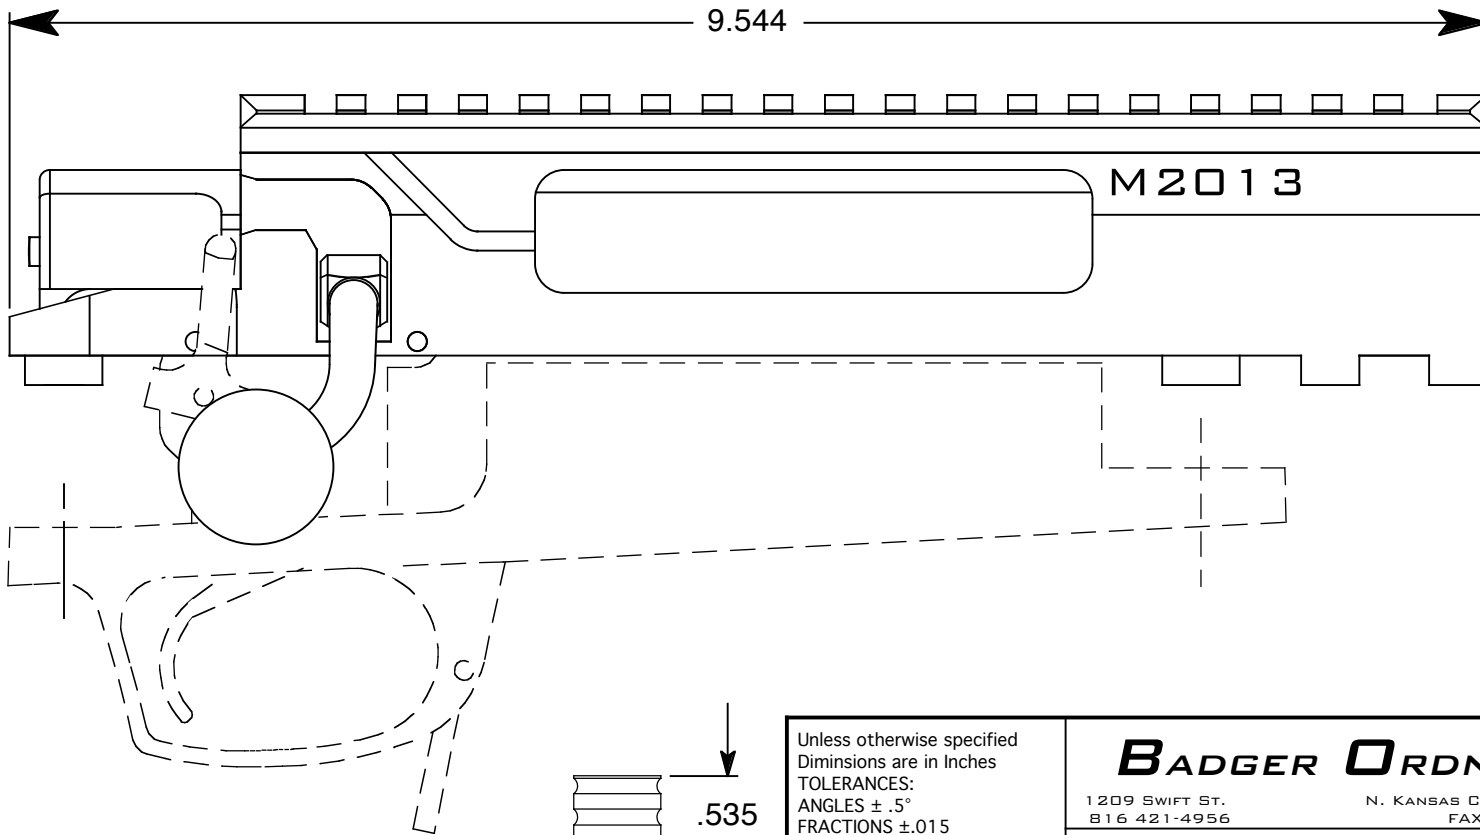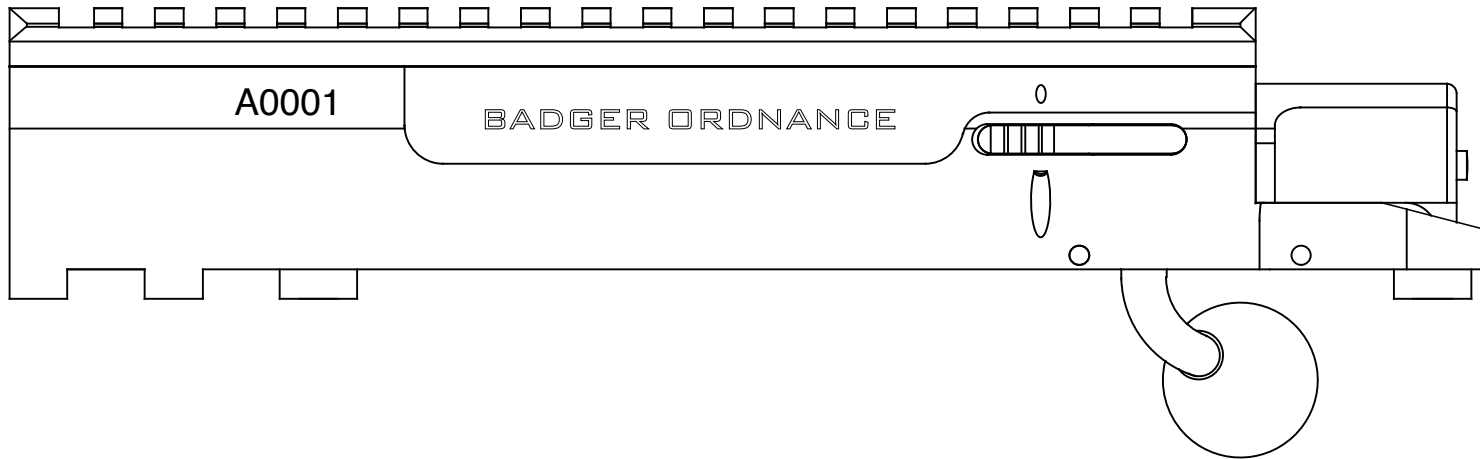

Pillar length if used with the Badger Ordnance M5 guard.

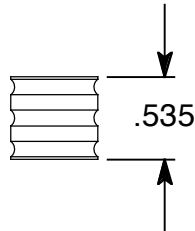

Unless otherwise specified
 Diminsions are in Inches
 TOLERANCES:
 ANGLES $\pm .5^\circ$
 FRACTIONS $\pm .015$
 .00 $\pm .01$
 .000 $\pm .005$
 .0000 $\pm .0005$

BADGER ORDNANCE LLC

1209 SWIFT ST.
 816 421-4956

N. KANSAS CITY, MO 64116
 FAX 816 421-4958

Action Inlet M2008 & M2013 Long Action

A	Dwg No.	100-40-01	Part No.	100-40		
				100-50		

ENGINEER: M. BORDSON

Scale: NONE

Date: 1 June 2013

Page 3 of 3

WARNING!

The assembly of this action into a rifle must be completed by a competent Gunsmith.

To remove firing pin assembly from bolt, hold bolt in right hand, bolt shroud facing you, with your left hand rotate firing pin assembly clockwise 180 degrees.

Remember the firing pin assembly is under spring load and will pop out towards you!

To reassemble reverse the above steps.


To remove firing pin or set protrusion, using a 1/16" hex (Allen) wrench, remove both set screws. There are 2 lengths of set screw, the long one goes in first. Screws are 4-40.

The firing pin will now thread in or out, be careful the spring and pin are under spring load.

Note that there are 4 (Four) grooves in the threaded portion of the Firing pin. When setting protrusion, the set screws must engage one of these 4 grooves.

Use blue Loctite on the last screw you install only!

Firing pin protrusion must be between .042" and .062".

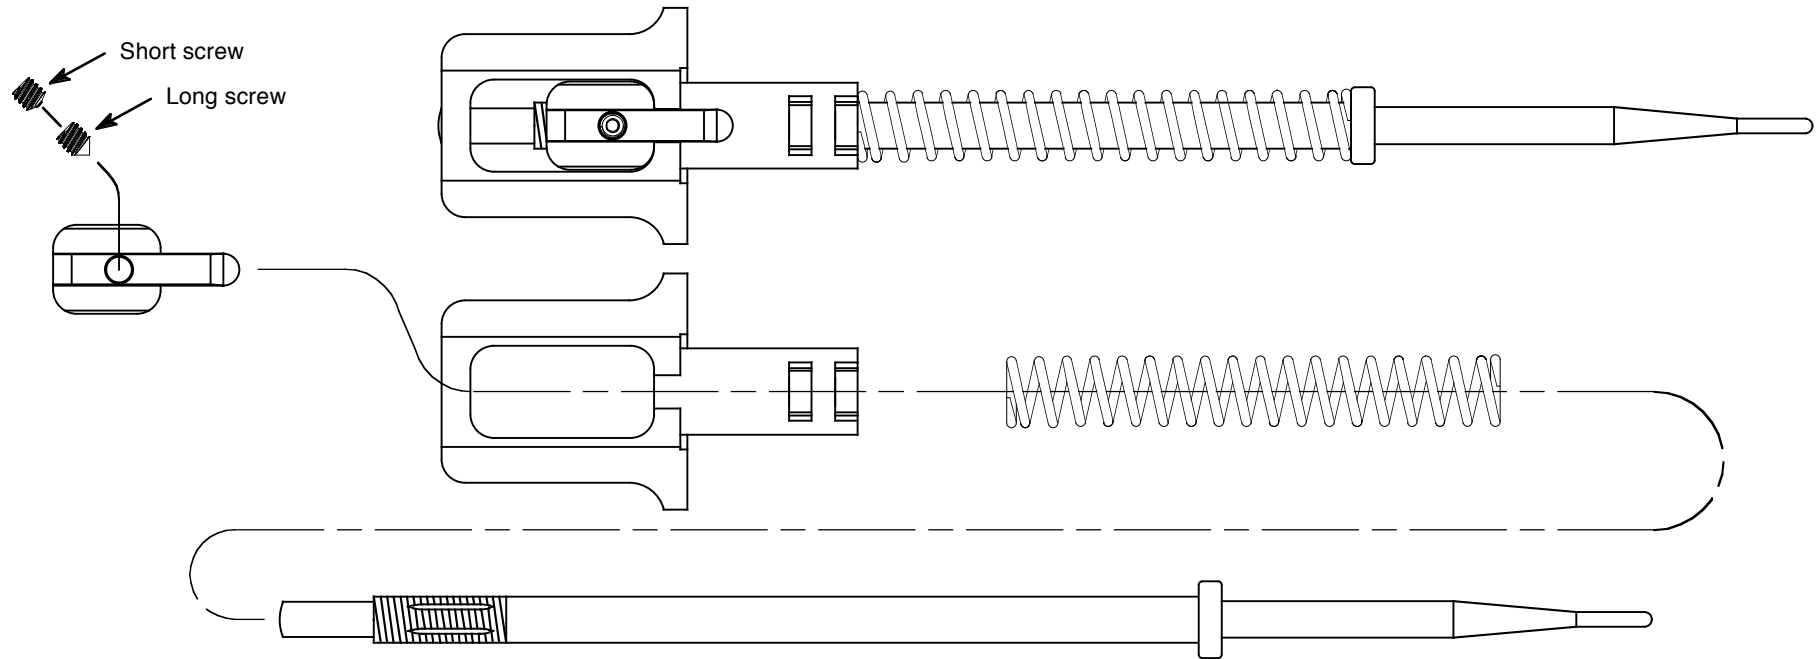

The Firing pin assembly consists of:

Firing pin
Firing pin spring
Bolt shroud
Cocking piece
Set screws X 2

Unless otherwise specified
Dimensions are in Inches
TOLERANCES:
ANGLES $\pm .5^\circ$
FRACTIONS $\pm .015$
.00 $\pm .01$
.000 $\pm .005$
.0000 $\pm .0005$

ENGINEER: M. BORDSON

BADGER **ORDNANCE** LLC

1209 SWIFT ST.
816 421-4956

N. KANSAS CITY, MO 64116
FAX 816 421-4958

Assembly, Firing pin, M2008 & M2013

A

Dwg No. 100-10-50

Part No. 100-10-50
100-30-60

Scale NTS

Date: 1 June 2013

Page 1 of 1