







## WARNING!

The assembly of this action into a rifle must be completed by a competent Gunsmith.

To remove firing pin assembly from bolt, hold bolt in right hand, bolt shroud facing you, with your left hand rotate firing pin assembly clockwise 180 degrees.

## Remember the firing pin assembly is under spring load and will pop out towards you!

To reassemble reverse the above steps.

To remove firing pin or set protrusion, using a 1/16" hex (Allen) wrench, remove both set screws. There are 2 lenghts of set screw, the long one goes in first. Screws are 4-40.

The firing pin will now thread in or out, be carful the spring and pin are under spring load.

Note that there are 4 (Four) grooves in the threaded portion of the Firing pin. When setting protrusion, the set screws must engage one of these 4 grooves.

## Use blue Loctite on the last screw you install only!

Firing pin protrusion must be between .042" and .062".

