


Installation of the
1005-306-37 & 1005-306-73
Angle Cosine Indicator Rail Mount
for the
Sniper Tools Design Angle Cosine Indicator
NSN 1005-99-212-5621

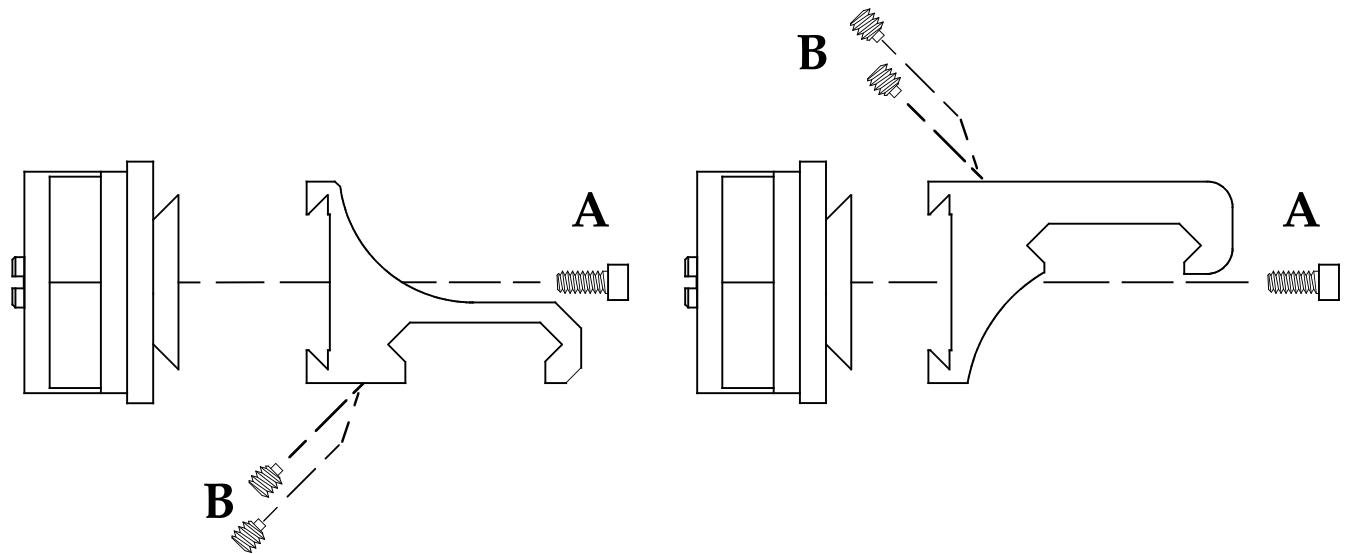

Make certain that the weapon is unloaded!

This mount is designed to fit a Mil spec M1913 (Picatinny)
Optic mounting rail.

Note: The Scope **MUST** be removed to install the Indicator mount.

1. Slide the Angle Cosine Indicator (ACI) into the Angle Cosine Rail Mount (ACRM) as in the diagram, using the #4-40 Cap screw (A) insert the screw into the mount and snug. **DO NOT OVER TIGHTEN!**
2. Making note of the location of the scope rings, slip the mount onto the optic rail.
3. Re-install the scope per manufacturer's instructions, move the ACRM to the desired location and install the 2 #8-32 soft point set screws (B) as indicated in the diagram.
4. Make sure you can operate the scope and view the Indicator.